



CH. IV: CLEANING & MAINTENANCE

THERMAL DISPENSERS

Daily

- 1 Rinse each dispenser by filling completely with hot water from a sink. After rinsing, fill with a 1/2 batch of hot water to preheat for the next day
- 2 Wipe down the dispenser exterior with a damp towel.



Notes:



Weekly

Clean each and every dispenser with urn cleaning powder. Here's how:

- 1 Remove the stem (brew tube), then put 2T of urn cleaner into your dispenser.



- 2 Brew a full batch of hot water from your brewer over the urn cleaner.



- 3 Scrub the urn with an urn brush.



- 4 Fill and rinse several times with cold water from a sink until all traces of urn cleaner are gone.




Notes:



- 5** If using a Fetco gravity dispenser, soak brew stem, dispense valve (easily removed by unscrewing), and level sight tube (if applicable) in a bath with hot water and urn cleaner, then rinse thoroughly with cold water.

IF USING A 3 LITER AIRPOT, SOAK THE DISPENSE TUBE.

Once soaked and rinsed, reassemble the dispenser.

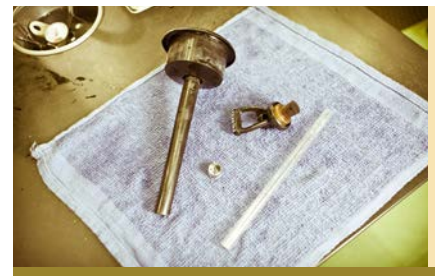

- 6** Brew a 1/2 batch of hot water into the clean dispenser to preheat for the next day.

Notes:
